

OPC Retractable Screen


Installation Instructions

ONE WAY


SCREEN KIT




TRACKS KIT

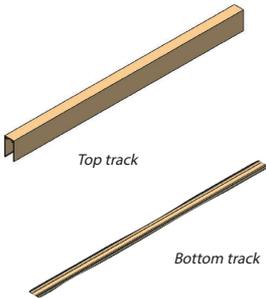

PROFILES

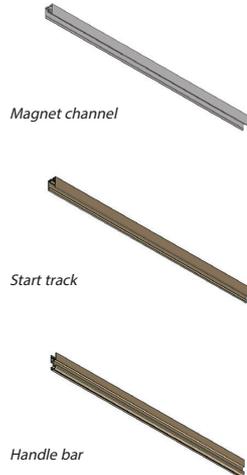


ACCESSORIES KIT

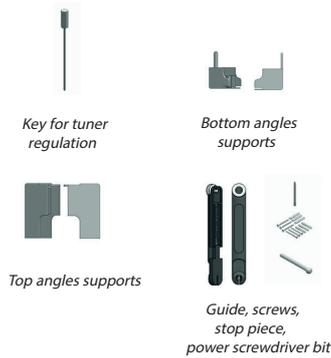

TRACK INSTALLATION

01

- Remove the protection of the double sticker and fix the tracks in place.
- Correct any differences in length by sliding the angles pieces along.

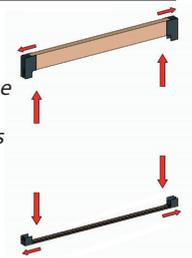

START TRACK INSTALLATION

02

- Decide on opening; insert the start track in the corner pieces.
- Insert the upper part first, then the lower part.
- Make the holes to fasten it in place (these should correspond to the holes on the upright).
- Fasten using the screws provided.



INSERTING AND FASTENING THE INSECT SCREEN

03


- Insert the net packet inside the tracks.
- Bring the net packet towards the start track.
- Insert the screen packet in the start track until it locks in place.



INSERTING TUNERS

04

- Insert the tuner in the appropriate angles, taking care to ensure that the heads of the tuner screws are always in sight and that the cords remain parallel.

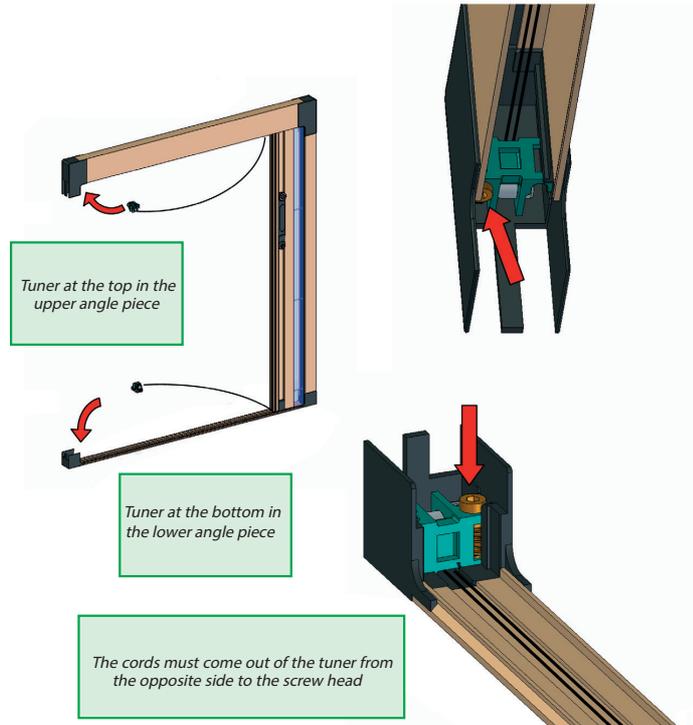

INSTALLATION OF RECEIVER CHANNEL

05


- Insert the receiver channel in the angles, by inserting the upper part first, then the lower part.
- Drill the fixing holes. (corresponding to the holes on the vertical profile).
- Fasten using the screws supplied.



SETTING OF CORDS

06

- If necessary with the screwdriver provided activate the adjusting screw in the tuner, by turning it either to the left or right to set the tautness of the cords until a smooth flowing movement is obtained and the handle bar is perfectly vertical.

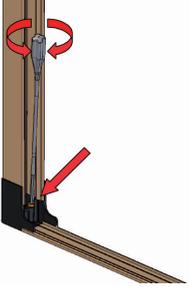


GUARD INSERT

10



MOVEMENT TEST


11

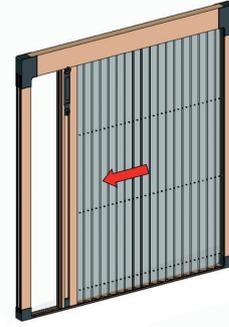

INSERT THE MAGNET CHANNEL

07


- Check the polarity of the magnet channel and insert on the receiver track.

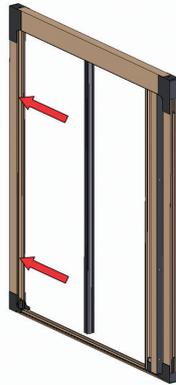

DISASSEMBLING (FOR CLEANING)

12


- Thread the dedicated screw into the provided access hole to remove the mesh from the Start Track.

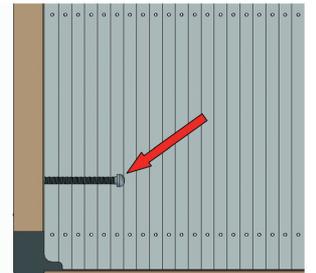

GUIDE ADJUSTMENT

08

- Place the guides on the top track.
- Push the guides lightly to make the spring work.
- Tighten the fastening screws.

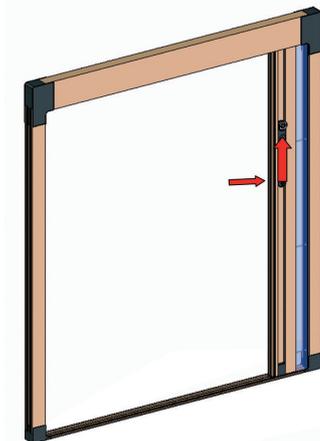


HANDLE

09

- Insert the handle then fastening with the screw.



Remove the cover

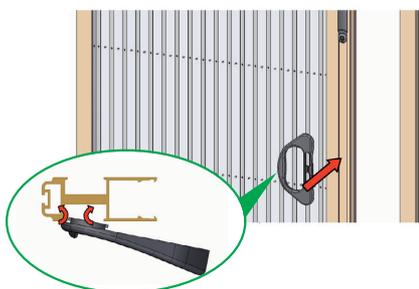

Pacific Wholesale Distributors
PO Box 504, Round Corner
NSW 2158

info@pacificwholesale.com.au